



1880423


K-Retro Bookshelf-Espresso

Parts List


A.	Left Side Frame	1 pc
B.	Right Side Frame	1 pc
C.	Back Frame	1 pc
D.	Stationary Shelves	3 pcs
E.	Poles	4 pcs
F.	Angle Braces	2 pcs
G.	Phillips Head Screws	12 pcs
H.	Sunk Allen Head Bolts	8 pcs
I.	Flat Allen Head Bolts	2 pcs
J.	Lock Washers	2 pcs
K.	Flat Washers	2 pcs
L.	Allen Head Wrench	1 pc
M.	Optional Allen Head Screwdriver Bit	1 pc
N.	Phillips Head Screwdriver	1 pc

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.


Hardware Illustrations



G. Phillips Head Screw




H. Sunk Allen Head Bolt



I. Flat Allen Head Bolt



J. Lock Washer



K. Flat Washer



1880423

K-Retro Bookshelf-Espresso

Attach Back Frame

Parts required

A.	Left Side Frame	1 pc	H.	Sunk Allen Head Bolts	8 pcs
B.	Right Side Frame	1 pc	L.	Allen Head Wrench	1 pc
C.	Back Frame	1 pc	M.	Optional Allen Head Screwdriver Bit	1 pc

1. **Attach Back Frame (C)** Align the pre-drilled holes in the Back Frame (C) with the pre-threaded holes in the Left & Right Side Frames (A, B). Be sure the brackets of Back Frame (C) face inwards. Secure, but do not tighten with Sunk Allen Head Bolts (H) using Allen Head Tool (L or M). See Illustration #1

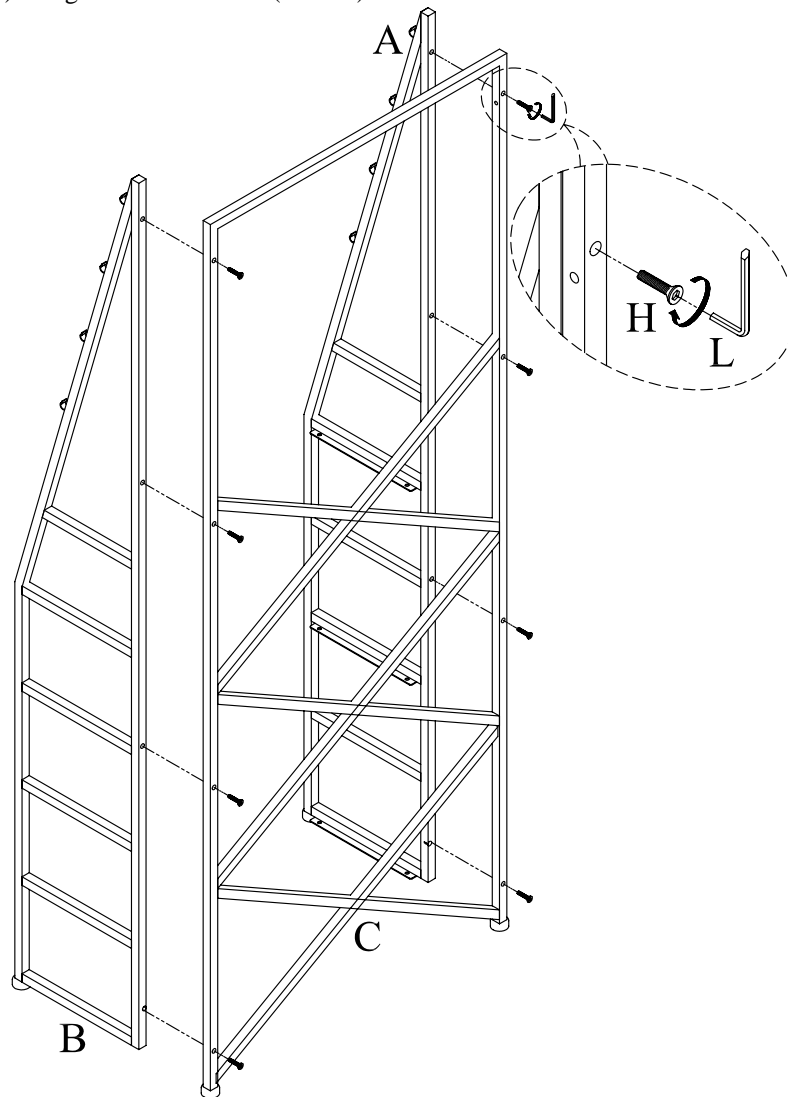


Illustration #1



1880423

K-Retro Bookshelf-Espresso

Attach Stationary Shelves & Angle Brace

Parts required

A.	Left Side Frame	1 pc	I.	Flat Allen Head Bolts	2 pcs
B.	Right Side Frame	1 pc	J.	Lock Washers	2 pcs
C.	Back Frame	1 pc	K.	Flat Washers	2 pcs
D.	Stationary Shelves	3 pcs	L.	Allen Head Wrench	1 pc
E.	Poles	4 pcs	N.	Phillips Head Screwdriver	1 pc
F.	Angle Braces	2 pcs	M.	Optional Allen Head Screwdriver Bit	1 pc
G.	Phillips Head Screws	12 pcs			

2. **Attach Stationary Shelves (D)** Align the pre-drilled holes in the Stationary Shelves (D) with the pre-drilled holes in the brackets of Back Frame (C) and rails of Left & Right Side Frames (A, B). Secure with Phillips Head Screws (G) using Phillips Head Screwdriver (N). See Illustration #2.
3. **Attach Poles (E)** Put the Poles (E) into the hooks of Left and Right Side Frames (A, B). See Illustration #2.
4. **Attach Angle Braces to the Left & Right Side Frames (A, B)** Align the larger holes in the Angle Braces (F) with the pre-threaded holes on the inside of Left & Right Side Frames (A, B). Secure with Flat Allen Head Bolts (I), Lock Washers (J) and Flat Washers (K) using Allen Head Tool (L or M). See Illustration #2.

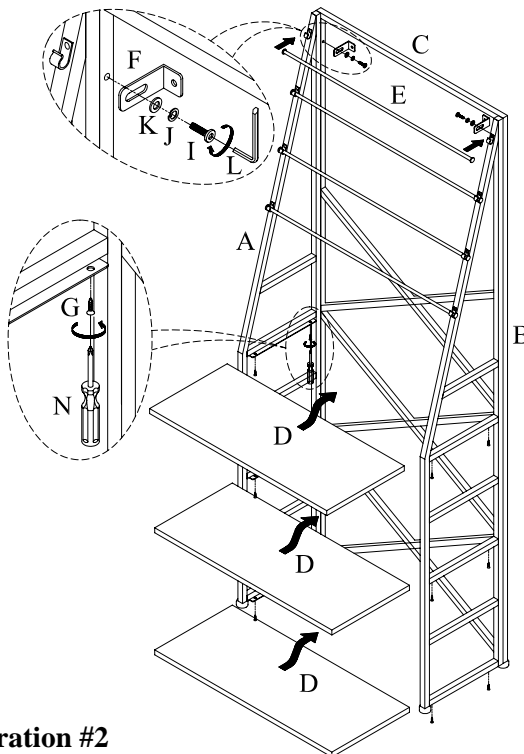


Illustration #2



1880423

K-Retro Bookshelf-Espresso

Attach the Angle Brace to the Wall

5. **Attach Angle Brace to Wall** Place the bookshelf in the desired location against the wall. Mark the location for the Angle Brace. Attach the Angle Brace to the wall. See note below for attachment hardware.

Note Regarding Attachment Hardware:

Hardware will be needed to secure this item to the wall in your home. Due to the many different types of materials used in home construction you will need to choose an appropriate wall fastener to ensure this item is securely attached to the wall. Please consult your local hardware specialist in selecting appropriate hardware and determining proper installation procedures based on your particular needs.